




	1
	2
	3
	4
	5
	6
	7
	8
	9
	10
	28

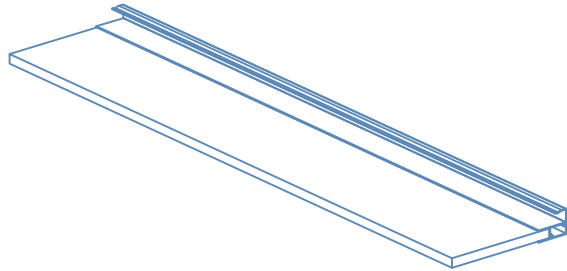

Step 1: Install the No. 4 wooden board into the slot of No. 3.


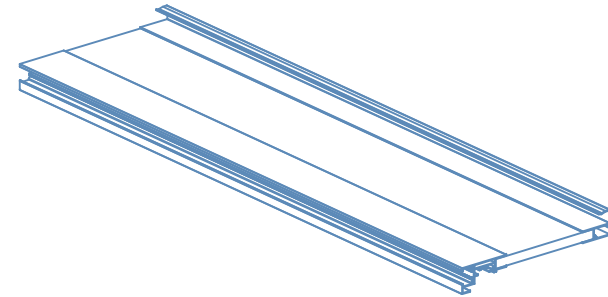


Step 2: Place No. 5 onto the assembly completed in Step 1.

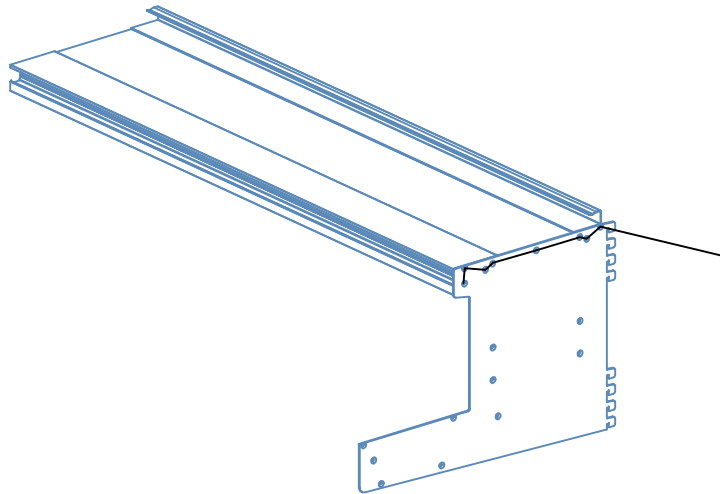

Align both ends and secure with screws at 8 positions.

Step 3: Attach No. 1 to the assembly from Step 2 using self-tapping screws

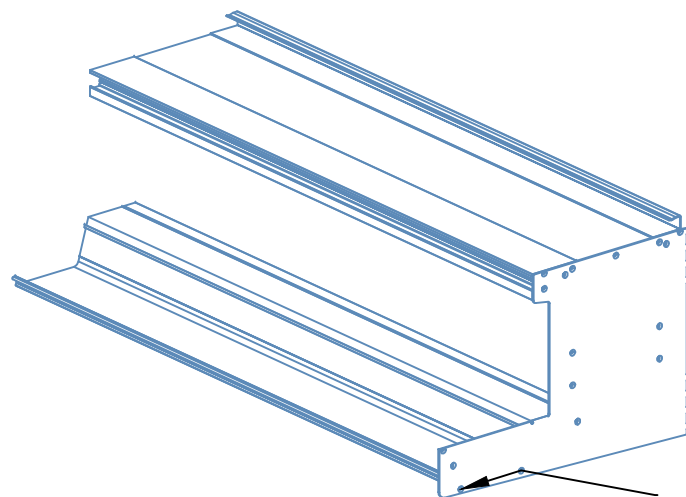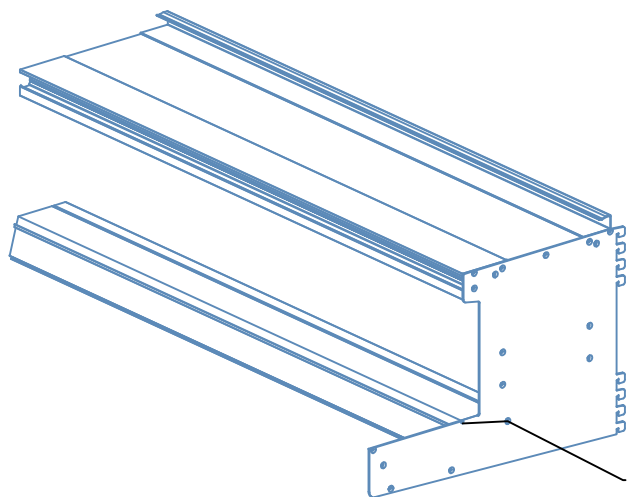


Secure with
screws at two
positions.

这


Align both ends and secure with self-tapping screws at 8
positions.

Step 4: Secure No. 6 to the assembly from Step 3 with screws

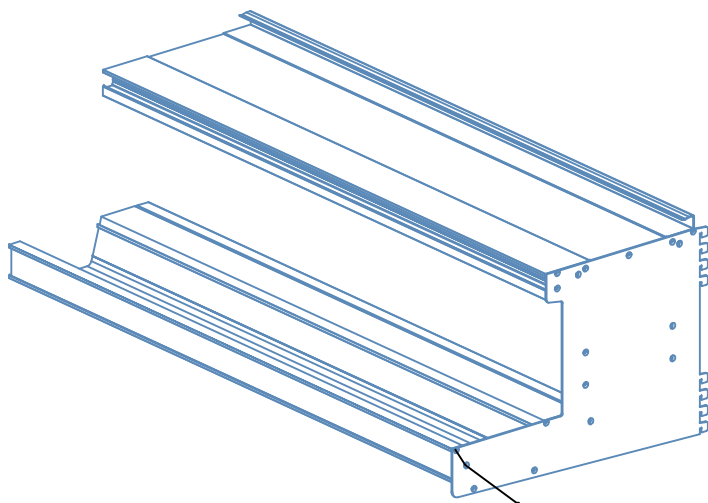



Secure with screws at two positions.

Step 6: Attach No. 8 to the assembly from Step 5 with self-tapping screws.

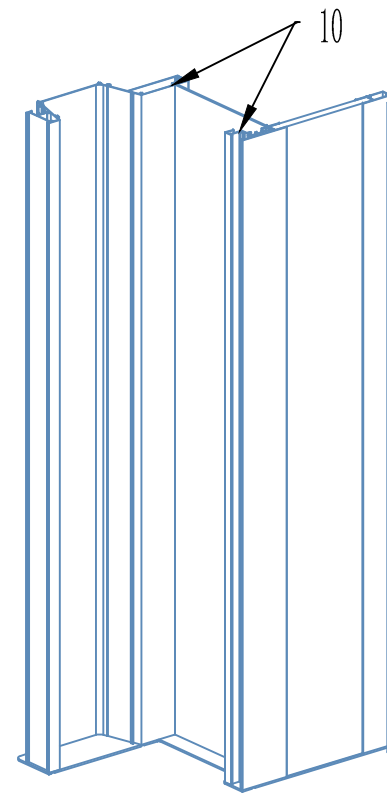

Install the No. 10 panel into the slot between No. 5 and No. 6.

After completing Step 6, flip the assembly over and install the No. 10 picture into the slot.

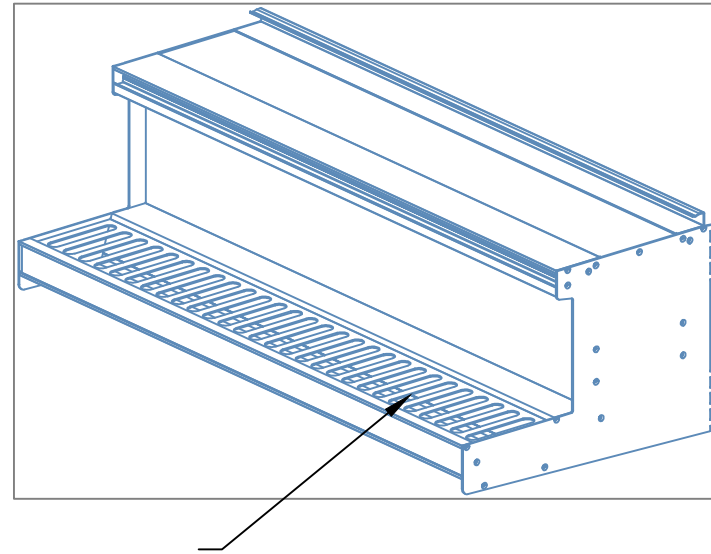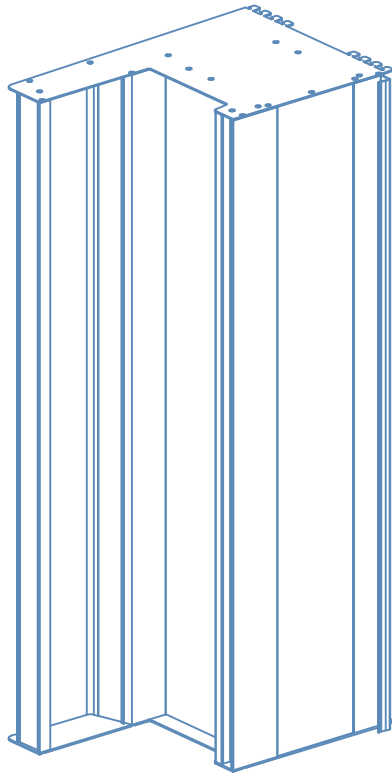

Place the No. 9 Leak board on top to complete the installation.

Install the No. 2 cover and fasten with screws in sequence
